



RGB COB LED Flood Lights



Specification:


- Nicely treated die-casting ADC12 aluminum alloy housing
- 4mm tempered glass cover, strong protection and good optical function
- Waterproof:IP65
- Operating Temperature: -20-50°C
- Storage Temperature: -40-60°C

Application:

Garden, residential area, landscape, architectural decorative lighting, roads and other places.



● Dimensions

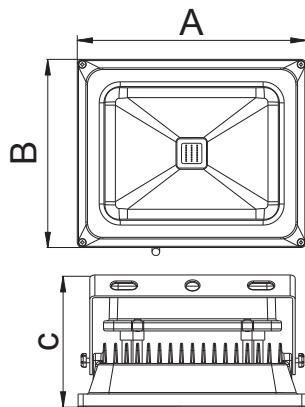

| Model No. | Product Dimension (mm) | | |
|-----------------|------------------------|-----|-----|
| | A | B | C |
| ENFL-10W-01RGB | 115 | 100 | 85 |
| ENFL-20W-01RGB | 180 | 140 | 135 |
| ENFL-30W-01RGB | 225 | 185 | 160 |
| ENFL-50W-01RGB | 285 | 360 | 183 |
| ENFL-70W-01RGB | 285 | 360 | 183 |
| ENFL-100W-01RGB | 290 | 360 | 183 |

● Data

| Model No. | ENFL-10W-01RGB | ENFL-20W-01RGB | ENFL-30W-01RGB | ENFL-50W-01RGB |
|--|---------------------------|----------------------|---------------------|---------------------|
| Input Voltage | 85-265VAC, 50-60Hz | | | |
| PF | >0.5 | >0.9 | | |
| Power (W) | 10 | 20 | 30 | 50 |
| Lumen (lm) | 1000 | 2000 | 3000 | 5000 |
| CRI | >80 | | | |
| Beam Angle | 120° | | | |
| Color | RGB | | | |
| IP Grade | IP65 | | | |
| LED | EPILEDS 35mil×1PC | | | |
| LED Driver | CE Driver | | | |
| Packing Dimension (mm) | 20PCS 560×260×230 | 12PCS 495×390×250 | 8PCS 480×415×305 | 4PCS 500×315×335 |
| Net Weight/ Gross Weight (Kg) | 20PCS 9.5/10.5 | 12PCS 11.4/12.5 | 8PCS 13.2/14.5 | 4PCS 10.9/12.0 |

● User Instruction:


1. Rated operational voltage: AC85~265V 50/60HZ. The input voltage should be stable to avoid large fluctuation. It should be no more than rated operational voltage.
2. Ambient temperature for storage: -40°C ~+60°C
Ambient temperature for working: -20°C ~+50°C
The best ambient temperature for working: -0°C ~+30°C
3. There are glass fittings for the light. Please handle with care. To avoid the glass from being broken, heavy loading is forbidden.

● Installation Instruction:

It is suggested that the LED flood lights should be installed by professionals following the instructions.

Otherwise, the following consequences may result.

1. The light given out by the flood light cannot be fully displayed. The beam angle is inappropriate.
2. The light cannot work normally
3. The danger of electric shock.

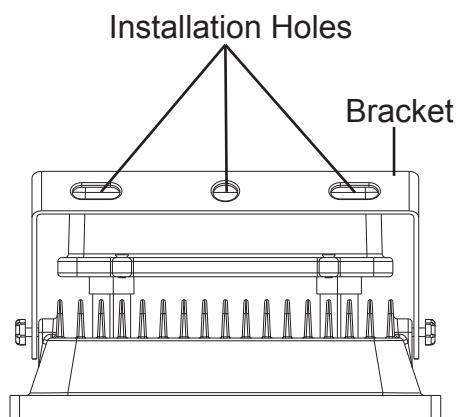

Step 1: Inspect installation position

First check whether the support or screws of the installation position can bear the weight of 1.5 times more than the body weight of the light. If not, please do not install.

Step 2: Fix the light

If the support for installation is steel, aluminum or iron bracket, please drill three holes in the metal support. The location of the holes is the same as what is on the bracket.

Please align the holes on both the bracket of the light and the metal bracket. Then lock them with screws. If the place for installation is cement or concrete on flat surface, please drill holes with jackhammer on the corresponding position of the mounting surface. Then fix the light with setscrews of more than Φ10MM.

1. Pass the screw through the bracket




2. Lock the screw



3. Install completed




● Remote Control Instruction:

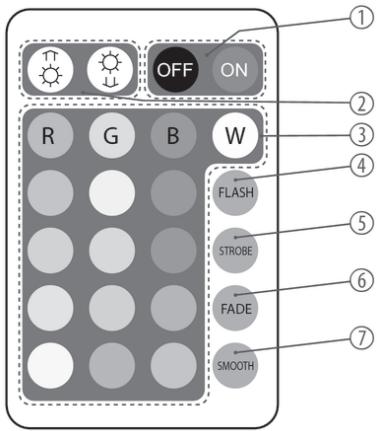

| | |
|---|--|
| 1 | [ON]/[OFF] Buttons to switch the unit on or off. |
| 2 | Brightness control. |
| 3 | Colour selection buttons. Use the <ul style="list-style-type: none"> ■ [W] button for white light, ■ [R], [G] or [B] button for the basic colours red, green and blue, ■ the coloured buttons to directly select a mixed colour. |
| 4 | [FLASH] Automatic change of all colours. |
| 5 | [STROBE] No function. |
| 6 | [FADE] Fast automatic change of all colours with blending effect. |
| 7 | [SMOOTH] Slow automatic change of all colours with blending effect. |

Inserting the battery into the remote control

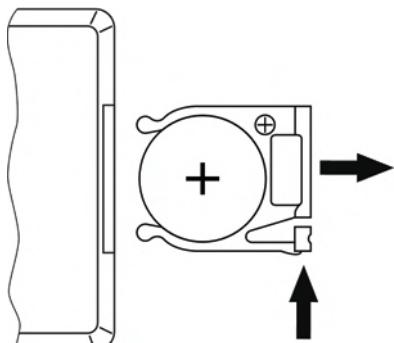

The IR sensor for the remote control signals is firmly connected to the device with a separate cable. Set up the receiver in such a way that there are no interfering objects between remote and receiver.

Establish all connections as long as the unit is switched off. Use the shortest possible high-quality cables for all connections.

Press the lock of the battery holder to the centre of the housing and pull out the battery holder like a drawer. Insert the battery. The battery is correct if the positive pole points to the housing base of the remote control. Slide the battery holder back into the remote until it clicks into place.

When shipping, the battery is already installed in the remote and protected against discharge by a transparent plastic foil. Remove the plastic foil prior to first use.