

ENELTEC[®]
brighten your ideas

SMD LED Flood Lights

EPISTAR

 


www.eneltec-led.com

Data

Power	50W	75W	100W	150W	200W	250W
Input Voltage	85-265VAC					
Driver	Normal Driver / CE Driver / MEANWELL					
Lumen (Lm)	5500	8250	11000	16500	22000	27500
Color	3000K/4000K/5000K/5700K/6500K					
LED	50pcs Epistar SMD3030	100pcs Epistar SMD3030	100pcs Epistar SMD3030	150pcs Epistar SMD3030	200pcs Epistar SMD3030	300pcs Epistar SMD3030
Beam Angle	120°					
PF	0.95					
CRI	70					
IP Rating	IP65					


Dimensions

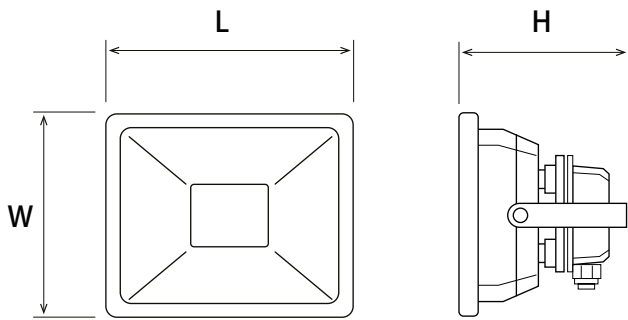

Power	Dimension (mm)		
	L	W	H
50W	240	210	60
75W	285	255	75
100W	285	255	75
150W	345	310	80
200W	380	349	97
250W	425	380	97


Installation

 1. Turn off the power
2. Adjust the mounting bracket (the mounting bracket allows you to choose the necessary light direction and to set the desired angle of a lighting fixture)

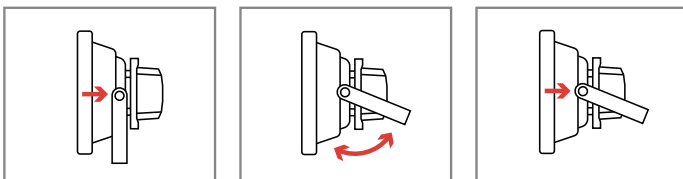


Use a wrench to loosen the adjust the mounting bracket and tighten the screw on the mounting bracket to your desired angle.

 3. Fix the lighting fixture with screws of corresponding size.

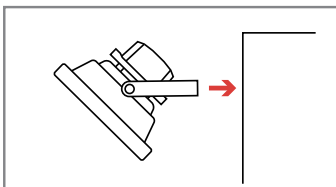

 4. Connect power cord of Flood Light to the nearest properly installed and grounded junction box of power with suitable strain relief means for power cord.

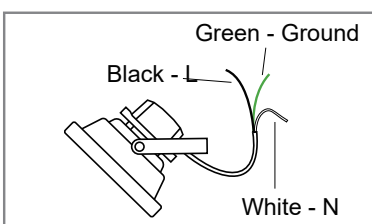

5. Turn on the main power. Installation is finished.

Application

